

N2882A 75 Ω to 50 Ω Adapter

User's Guide



© Copyright Agilent Technologies 2009 All Rights Reserved.



Contents

Introduction 3 Dimensions 3 Characteristics and Specifications 4 Using the Adapter 5 Plots 6

N2882A Adapter

The N2882A is a 75 Ω BNC to 50 Ω BNC adapter that allows you to connect a 75 Ω video signal to the 50 Ω input of an oscilloscope without aberrations and reflections. The N2882A presents up to 8 GHz of bandwidth with flat frequency response and low return loss.

Dimensions

Weight	40 g
Width (B - see diagram below)	13.72 mm (0.54 inches)
Length (D - see diagram below)	65.79 mm (2.59 inches)



Characteristics and Specifications

Characteristics and specifications for the N2882A adapter are shown below. The adapter / oscilloscope should be warmed up for at least 20 minutes before any testing and the environmental conditions should not exceed the adapter's specified limits. These characteristics are all typical.

Electrical Characteristics Frequency¹ DC to 8 GHz Bandwidth (-3 dB)

VSWR	DC-100 MHz: 1.06
	100-1000 MHz: 1.22
	1000-2000 MHz: 1.4
Attenuation	DC: $5.7 \pm 0.1 \text{ dB}$ Attenuation Flatness: $5.7 \pm 0.4 \text{ dB}$
RF Input Power	0.25 W

¹Ensure proper BNC mating. An unconnected mating finger on the male side of either BNC connection will cause a minor resonance around 4 GHz.

Mechanical Characteristics			
75Ω	Female BNC		
50Ω	Male BNC		
Environmental Spe	cifications		
cilvironmental Spe	cincations		

Temperature	Operating: -55 °C to +100 °C
	Nonoperating: -55 °C to +100 °C



Using the N2882A Adapter

The N2882A Adapter connects directly into a 50Ω terminating instrument. If your oscilloscope has multiple input impedance options (for example, 50Ω and $1M\Omega$), set the input channel that will be used with the N2882A Adapter to 50Ω .

The next step is to adjust the attenuation settings on your oscilloscope so the waveform is properly displayed when the adapter is in use. This process varies depending on whether you are using an Infiniium oscilloscope or an InfiniiVision oscilloscope.

Changing the Attenuation on an Infiniium Series Oscilloscope

Navigate to Setup > Probes in the menu bar at the top of the display. In the Probes Setup dialog box, click on the Configure Probing System ... button. This will cause a drop-down menu to appear. Select User Defined Probe from this menu. You will then see a field to enter your attenuation. You can enter the attenuation in either decibels (5.7 dB) or as a ratio (1.947:1).

Changing the Attenuation on an InfiniiVision Series Oscilloscope

Press the channel button on the front panel that corresponds to the input channel you are going to use with the adapter. Then press the Probes softkey. In the next menu, repeatedly press the 2nd softkey from the left until decibels is checked (this softkey lets you set the attenuation). Turn the Entry knob (the knob with the circling arrow) on the front panel until the softkey reads 5.7 dB.

Plots





Plot of insertion loss (S21)



Plot of return loss on 50Ω end (S22)



Plot of return loss on 75Ω end (S11)



Agilent Technologies, May 2009 Manual Part Number: N2882-97000

