




Caution: Disconnecting Probe Amplifiers from SMA Probe Heads

CAUTION

When disconnecting a probe amplifier from the N5380A or E2695A SMA probe heads, grasp the probe amplifier as shown below and pull it straight away from the SMA probe head without any rocking (either side-to-side or up-and-down).

Pulling on the probe amplifier cable or strain relief, or rocking the probe amplifier to remove it, may damage the probe head and/or probe amplifier.

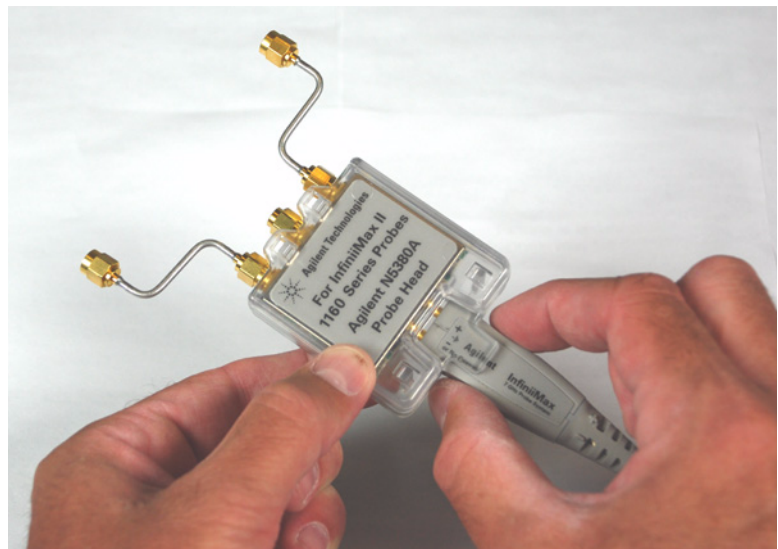

© Agilent Technologies, Inc. 2011
Printed in Malaysia, September 2011
N5380-92001



Agilent Technologies