


Caution: Disconnecting Probe Amplifiers from SMA Probe Heads

CAUTION

When disconnecting a probe amplifier from the N5380B or E2695A SMA probe heads, grasp the probe amplifier as shown below and pull it straight away from the SMA probe head without any rocking (either side-to-side or up-and-down).

Pulling on the probe amplifier cable or strain relief, or rocking the probe amplifier to remove it, may damage the probe head and/or probe amplifier.

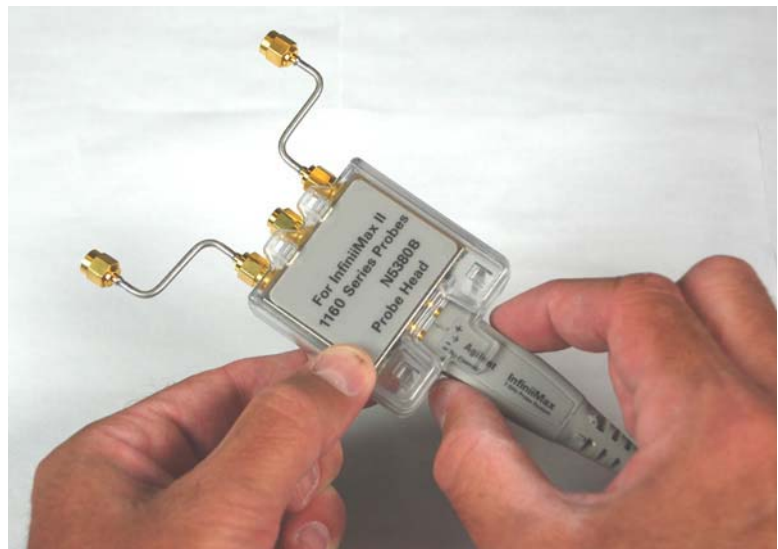

© Keysight Technologies 2011, 2012

Printed in USA, April 2012

N5380-92002

